

STG-04 MIN LIMITATION EXHAUST AIR TEMPERATURE OF HEAT EXCHANGER

Climatix is configured to prevent the unit's rotor from freezing by using an exhaust air sensor. If the exhaust air temperature drops below the setpoint, the unit reduces heat recovery output until the temperature returns to normal.