

STC-05 SUPPLY AIR DAMPER

The actuator opens the outdoor air damper when the supply air fan is running. When the supply air fan is stopped or if the unit is without power, the damper closes. This can be used if it is not possible to install an outdoor air damper.