

STH-F1D-... FIRE MODE FAN CONTROL

Settings in Climatix decides how the fans should behave in case of fire alarm. Supply and extract air fans can be controlled separately.

Choose between:

STH-F1D-10	Supply and extract air fans stop
STH-F1D-20	Supply air fan stops and extract air fan runs at set speed
STH-F1D-30	Extract air fan stops and supply air fan runs at set speed
STH-F1D-40	Supply and extract air fan runs at set speed